

QUICK INSTALL GUIDE SOLENOID WIRING

Solenoid wires should be connected directly to the controller or if remote via multicore signal cable. To ensure longevity only join wires using Grease Crimp Connectors (ELCG).

- The outer sheath of the individual wire does not need to be stripped back.
- Push a single wire into each entry hole fully past centre (The translucent back allows the wires to be seen).
- Use pliers or grips to firmly squeeze the blue top down.
- Ensure all wires are secure.



- Do not take connector apart as waterproof sealing may be compromised.
- If joining wires outside valve chamber use Direct Burial type connectors (ELCGD).




HUNTER X2



HUNTER HCC




HERON Ma/Mi

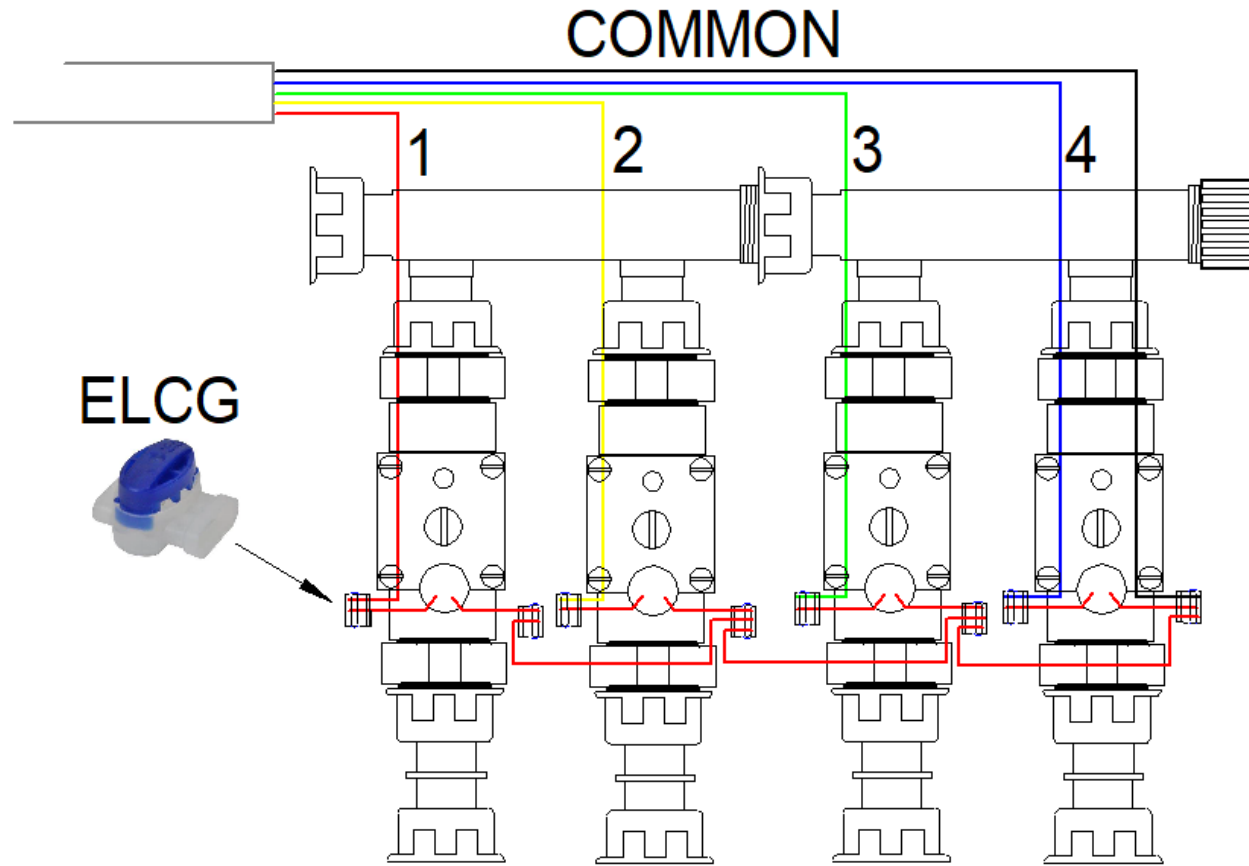




HUNTER XC HYBRID

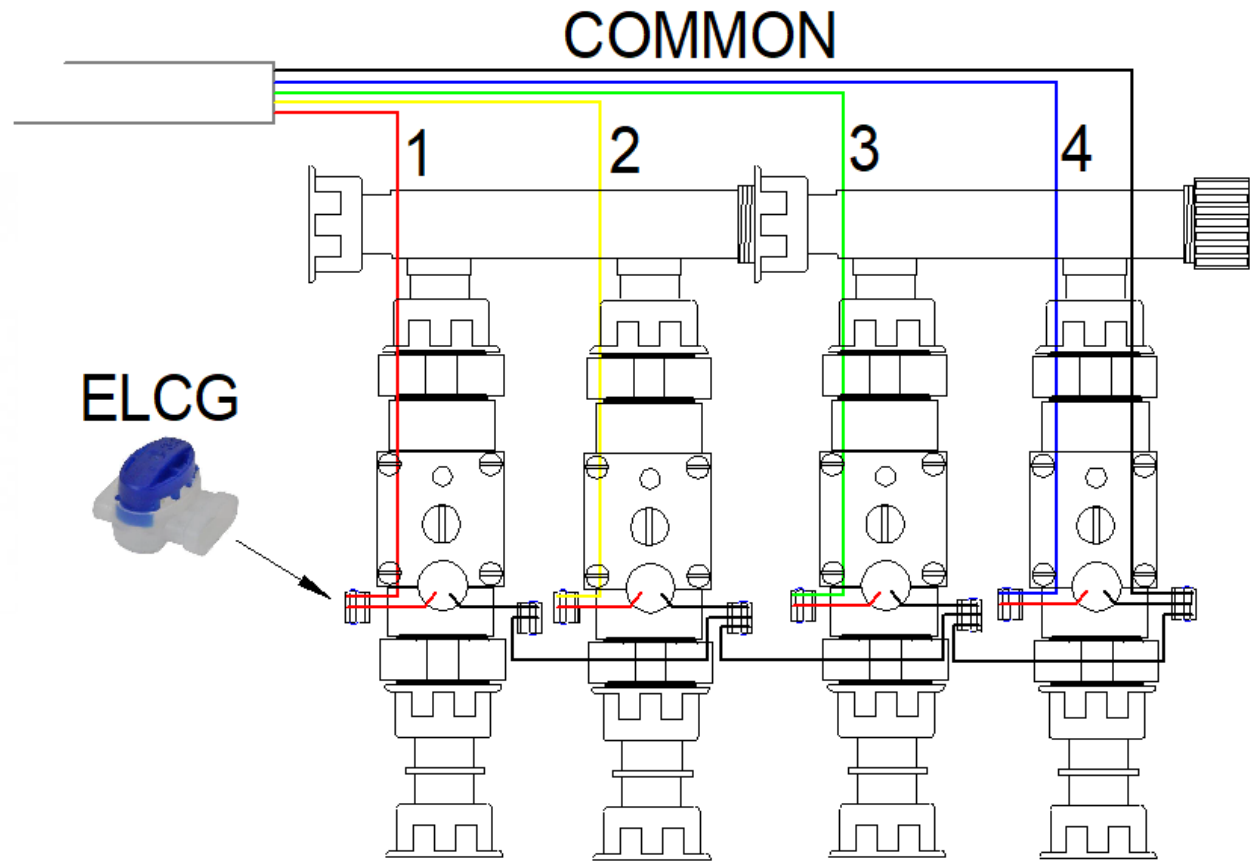



GALCON DC4

ELCG

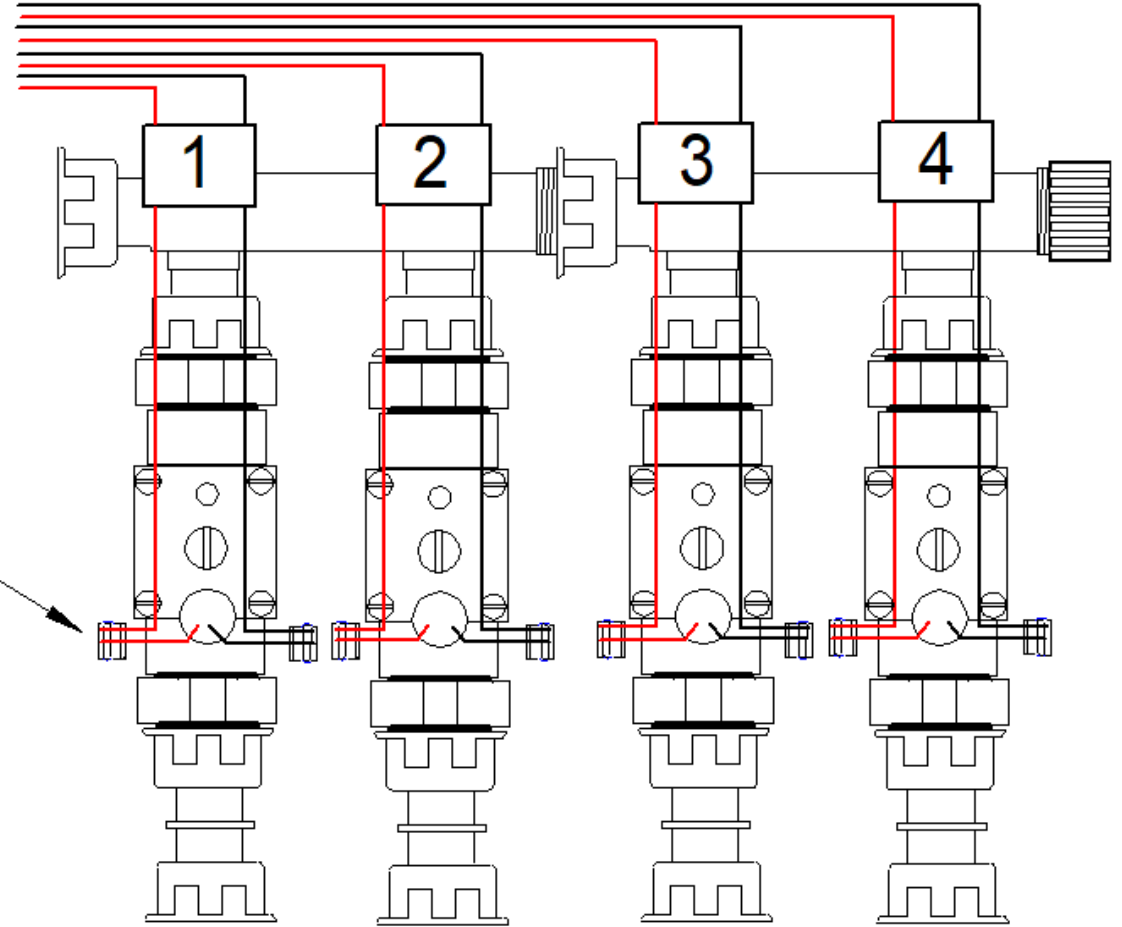



HUNTER NODE BT

